





# REFERENCE GUIDE

## PHOTO



DURACELL	IEC	Energizer/ Ucar	Varta	Kodak	Panasonic	Rayovac/ Vidor	Seiko	Sony	Phillips	Renata	Others
625A	LR9	EPX625G V625U (V625PX)	625A	KA625 (KX625)	LR9/H-D	R625 (RPX625)	625A	-	-	-	EPX625 EPX625A KX625, MR9
28L	2CR11108 E23A-A23	L544	V28PXL	K28L	-	-	-	-	-	-	4G13, 7H34 PS28L, 2CR1/3N
1/3N	CR11108	2L76	CR1/3N	K58L	-	-	-	CR1/3	CR1/3N	-	DL1/3N, VCR1/3N

## WATCH



DURACELL	IEC	Energizer/ Ucar	Varta	Kodak	Panasonic	Rayovac/ Vidor	Citizen	Phillips	Renata	Others
362/361	SR58	362	V362	KS362	SR721SW	362 RW310	280-29	362	362	D362 R362/12
364	SR60	364	V364	KS364	SR621SW	364 RW320 354-1W	280-34 SB-AG	364	364	D364 R364/31
371/370	SR69	371	V371	KS371	SR920SW	371 RW415 RW315	280-31	-	371	D371 R371 R370
377	SR66	377	V377	KS377	SR626SW	377 RW329 376/377-1W	280-39	377	377	D377 R377/37 BA
386/301	SR43	386	V386	KS386	SR43W SR43SW	386 RW44	280-11 280-41	-	386	D386 R386/6, H
389/390	SR54	389 390	V389 V390	KS389 KS390	SR1130W SR1130SW	389 RW49 390 RW39	280-15 280-24	389 3	89	389, D390 R389/17, M R390/11 10L122
391/381	SR55	391	V391	K391 RW40	SR1120W SB-BS	391	280-30	391	391	D391 R391/23, L
392/384	SR41	392 384	V392 V384	K392 K384	SR41W SR41SW	392 RW47 384 RW37 392-1	280-13 280-18	392	392	D392 D384 R392/2 K R384/10
394	SR45	394	V394	KS394	SR36SW SR936SW	394 RW33	17	-	394	D394 R394/15
399/395	SR57	399 395	V399 V395	KS399 KS385	SR927SW SR927(926)SW SR9327W	399 RW413 395 RW313	280-44 280-48	-	399	D399 D395 R399/35 W, R395/25



## SECURITY

DURACELL	IEC	Energizer/ Ucar	Varta	Kodak	Panasonic	Rayovac/ Vidor	Toshiba	Sony	Phillips	Others
N	LR1	E90	4001	KN	AM5	810-2	LR1G	LR1SG	LR1	MN9100, 114, 810 910A, 5500, AM5 E90, LR1, N, R1S
J	4LR61	539	4018	KJ	4LR61	rR.J-1	4LR61	-	539	867, 1412P, J V76PX, 7K67
MN11	-	-	V10GA	-	-	-	-	-	-	E11A
MN21	3LR50	A23	V23GA	K23 K23A	LRV08PA LRV08	R23A	-	-	3	LR50, A23 E23A, GP23A
MN27	MN27	-	-	-	-	-	-	-	-	-