

HANDLE WITH CARE

Use only on ground
Use caution on windy days
Do not drop or bend
Do not immerse in water or any other liquid
Do not use or store near fire or heat sources
Do not disassemble
Do not connect more than 2 Modules in series or Parallel configuration

WARRANTY INFORMATION

Duracell offers a 24-month limited warranty from the date of purchase. Keep a copy of your purchase receipt as proof of purchase. Our product's warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. Therefore, Customer acknowledges and agrees that: Duracell is not liable for damage or loss resulting from the use of this product or for any claim from.

CONTACT US

Please contact Duracell Consumer Relations at 800-551-2355 or visit www.duracell.com for more information.


MADE IN CHINA
1027265



DURACELL®

QUICK START GUIDE

DSP100 SOLAR PANEL

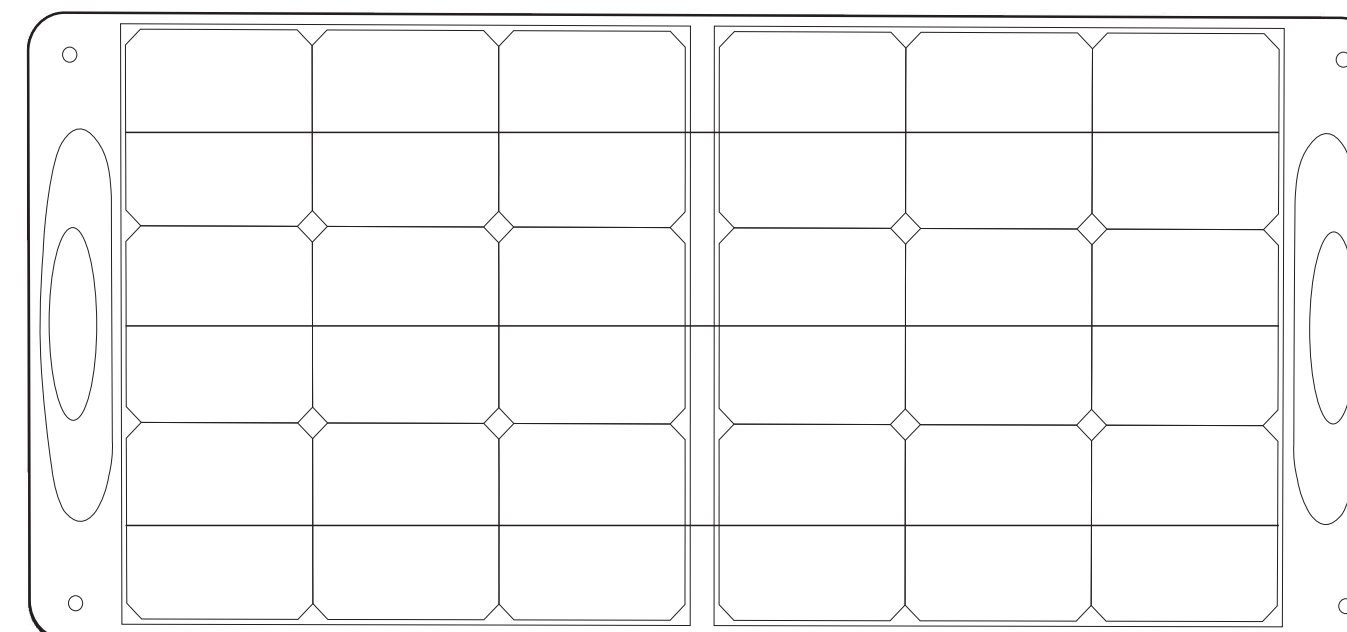

LET'S GET STARTED

Power up – The DSP100 is compatible with all Duracell Portable Power Stations. Depending on the model, a connection cable (included) may be required.

POWER 300 – Use the connection cable (included) to connect the solar panel to the DC-in port, use **plug B** (smallest diameter DC4017)

POWER 500 – Use the connection cable (included) to connect the solar panel to the DC-in port, use **plug C** (larger diameter DC8020)

POWER 1000 – Connect the solar panel directly into the **Anderson port** using **plug A** (no cable needed) **OR** use the connection cable (included) to connect to the DC-in port, use **plug D** (smaller diameter DC6530)

Follow the sun – for best results, continuously realign with the sun.

KEEP DRY

Duracell Solar Panels can withstand water splashes and light rain when set up with the cell surface up. Backside fabrics are not waterproof and contact with water should be avoided. Do not leave your Solar Panels in the rain. Do not immerse in water.

KEEP CLEAN

Use a damp cloth to gently wipe the surface, do not use any chemicals or corrosive products. Do not immerse in water. A soft brush can be used to remove any loose dirt.

